

Fly school

Parts No.	Parts Name	Ref.Picture
2003000041	KA-140 Fly school joystick	
2002000001	KA-60/120/130/140/150/160/170 S3 game box	
1046000003	Motor for MSKY all kiddie ride 220V 60B 50W	
1043000008	KA-60/120/130/140/150/160/170 Motor gear	
1040000004	UCP 203 for MSKY all kiddie ride	
1042000339	KA-140 17inch LCD moduel metal plate	
1021000003	KA-140 17inch monitor	
2001000004	KA-140 17inch Driver board	
1029000059	KA-140 17inch LCD frame	
1038000002	KA-140 LCD Lock	
1020200008	KA-140 17inch LCD cable	
2005000002	KA-140 Power supply	
1029000037	KA-140 propeller	
1020000040	KA-140 Steering wheel cable	
1020000064	KA-140 Speaker cable	
1020000087	KA-140 Coin accepter cable	
1015000012	KA-140 5pin socket	
1031000016	KA-140 rubber damper	

1020000072	KA-140 Motor cable	
1020100002	KA-140 220V power cable	
2001000016	KA-140 LED flash board	
1020000028	KA-140 4pin docking femail cable	
2005000002	KA-140 Power supply	
1020000040	KA-140 Steering wheel cable	
1020000064	KA-140 Speaker cable	
1020000087	KA-140 Coin accepter cable	
1020000029	KA-130 Colorful LED cable	
1015000012	KA-140 5pin socket	
1020000072	KA-130 Motor cable	
1020100002	KA-140 220V power cable	
1020000084	KA-140 2pin LED cable	
1020000058	KA-140 2pin SM male cable	